



See Note 3

Notes:

1. Either 2 or 3 wire thermostat can be used.
2. Default Switch Position
 Master Slave Master
 Reset Normal Normal
 Zone 4 Priority Off
3. Priority Operation: When zone 4 is switched to the priority setting and is actuated, all other zones will stop operation until zone 4 is satisfied. When zone 4 is not switched to priority, all zones will operate independently.
4. See product literature for expansion connections using the Master/Slave switch.
5. All wiring for SEISCO must be in accordance with local electrical wiring codes.

Multi-Pump Control Relay

TT/common/assemblies/HRC/TTI Info

REVISED	RB Cass	DATE	03-05-09	TERRA-THERM, Inc.	
DESIGNED	RB Cass	Multi-Pump Control Relay			Wiring Diagram
DATE					
APPROVED		BY	DATE	REV	
		E			